

## Technical Specifications

<b>Power supply</b>	9 ... 30VDC or 2x 1.5V AA batteries
<b>Power consumption</b>	typ. 0.195W
<b>Power loss</b>	max. 0.195W
<b>Interface</b>	Loxone Air: 868MHz (SRD Band Europe), 4 channels available max. Power 15.1mW e.r.p. 915MHz (ISM Band Region 2), 10 channels available max. Power 13.2mW
<b>Ambient temperature</b>	external power supply: -30 ... 70°C / -22 ... 158°F battery powered: -18 ... 55°C / 0 ... 130°F
<b>Humidity</b>	max. 95% r.H. (non condensing)
<b>Motion detection</b>	passive infrared sensor
<b>Motion detection range</b>	8m / 26.25ft (at 3m / 9.84ft height) 18m / 59.1ft (at 10m / 32.8ft height)
<b>Recommended installation height</b>	2.5 ... 3.5m / 8.2 ... 11.5ft
<b>Installation height</b>	max. 10m / 32.8ft
<b>Detection angle horizontal</b>	360°
<b>Detection angle vertical</b>	110°
<b>Measuring range of brightness sensor</b>	0 ... 83000lx
<b>Acoustic detection</b>	60Hz ... 20kHz mono, only when externally powered

# LOXONE

## Need Help?

[loxone.com/support](https://loxone.com/support)

**Loxone UK**  
The Forum  
Station Road  
Theale, RG7 4RA  
United Kingdom

**Loxone Electronics GmbH**  
Smart Home 1  
4154 Kollerschlag  
Austria

[loxone.com](https://loxone.com)



VZ10223

# LOXONE



# Presence Sensor Air

Part No.: 100420(White)  
Part No.: 100421 (Anthracite)

## About the product

The Loxone Presence Sensor is used to detect presence, motion and brightness for use in building automation and similar non safety critical applications.

## Features

- Presence Detection
- Motion Detection
- Brightness Detection

## Installation

Install the mounting ring on the desired installation place. Power up the device and pair it with your Miniserver in Loxone Config. To finish the installation attach the Loxone Presence Sensor on the mounting ring.

## Additional information

<b>Safety Protection</b>	IP30
<b>Dimensions</b>	98x19mm / 3.86x0.75" (DxH) (without Fresnel Lens)
<b>Maintenance &amp; Cleaning</b>	This device is free of maintenance and may only be cleaned with a dry cloth.



For additional information, declaration of conformity, visit [www.loxone.com/help/presence-sensor-air](http://www.loxone.com/help/presence-sensor-air)

## Connection

<b>Wire cross-section</b>	0.25 ... 0.8mm <sup>2</sup> / AWG23 ... 18
<b>Stripping length</b>	5mm / 0.2"
<b>Temperature resistance</b>	-40 ... 105°C / -40 ... 221°F

## Installation

<b>Screw length</b>	plaster / insulation thickness + wall plug length + 2mm (mounting plate) + 3mm (screw diameter)
<b>Screw type</b>	countersunk, 3.0mm diameter or M3 thread
<b>Number of screws</b>	2 pieces

## Information

Contains FCC ID: ARRV-000376

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

